WET FOR HER

AirMe

User manual




@WETFORHER

Button introduction


• Press the **t** button for 3s to turn on or off.

Press "+" to increase the speed and "-" to reduce the speed.

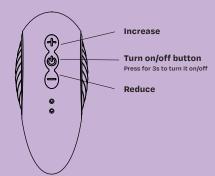

How to charge

- Line up device magnets with the charging cable, connecting both. The button flashes, signaling the start of charging.
- Once fully charged, the indicator light stops flashing.
- 3. A full charge takes 45 minutes, providing 60 minutes of continuous playtime.

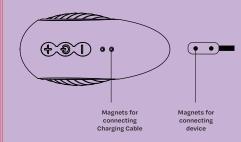

Care instructions

Cleaning:

- Gently clean the device with warm water and soap.
- Rinse thoroughly with hot water to remove all soap residue.
- 3. Pat dry with a lint-free cloth or microfiber towel.

Storage:

- Store the device in a clean, dry place away from other materials.
- · Keep out of reach of children.

Important:

- Do not clean the device with alcohol, as this can damage the surface and accelerate wear.
- The device is water-resistant (IPX6), but not waterproof. Avoid prolonged exposure to water.

Specifications

Material	Silicone + ABS
Size	3.94 * 2.3 * 1.74"
Net Weight	105.2g
Waterproof	IPX6
Working Frequency	9 speeds
Working Time	About 60mins
Noise	<50db

Warnings: Do not use this product if you have an allergy to silicone or silicone-based products. If you experience any soreness, dryness, or redness, discontinue use immediately and consult a physician. If using a Lube only use qualitative water-based Lubes. Be aware of possible side effects if combined with stimulatory gels, lubricants, or other products. For safe and hyglenic use, ensure the product is cleaned thoroughly after each use and rinsed with fresh water. Ensure no hair or skin gets caught in the pulsating part of the toy. Remove the toy gently from body parts.

Find out more online at: WWW.WETFORHER.COM

WFH DESIGN USA LLC

All Right Reserved - order@wetforher.com
Designed in Miami - Made in China

