


User instruction manual

Remote Control

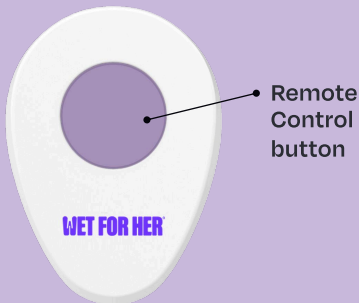


First time use

1. Remove the battery protection.
2. The Remote Control works with all Wet For Her products that vibrate.
3. The Remote Control works within 10m (32 ft) of any Wet For Her toy that is turned on.

How to use Remote Control

Always Unplug the toy from the charging cable before turning the toy ON.

1. Turn on the Remote Control by pressing the button.
2. Ensure the toy is turned on: Press and hold the Power Button  on the toy for 5 seconds, the indicator light will illuminate. Your toy is now turned on.
3. Press the Remote button repeatedly to switch between the vibration modes.
4. Turn off the Remote Control by holding the large button for 5 seconds.
5. Turn off the toy by pressing and holding the toy's Power Button for 5 seconds.
6. Wash, sanitize and charge: You are ready for round 2.

Battery

Use a coin to twist the cap off. The Remote control requires 1 x CR2032 battery (included with purchase).

* This remote control should not be exposed to high temperatures and humidity. Remove the battery before recycling.



WET FOR HER®

User instruction manual
Toys & Remote Control

