


86 mm

WET FOR HER®**Mini Bullet**

User manual

@WETFORHER **Button introduction**

Unplug the charging cable before turning the toy on. Press and hold the  POWER button for 5 seconds, the indication light will illuminate. Your toy is now turned on. Then, press the POWER button on the toy once or press the button of the Remote Control (not included) once to start vibrations. Press the POWER button again to change vibration modes. Alternatively, use the ClickHer remote to switch between 10 vibration modes. Hold the POWER button for 5 seconds to turn off the device. The indication light will go off.

**How to charge**

Plug in the DC jack to recharge the build-in battery. Plug in the USB cable in to the power sources with appropriate adaptor or USB port from computer for recharging the vibrator. The LED light blinks when the vibrator is being charged. The LED light remains on when the vibrator is fully charged.

Care instructions**Cleaning:**

1. Gently clean the device with warm water and soap.
2. Rinse thoroughly with hot water to remove all soap residue.
3. Pat dry with a lint-free cloth or microfiber towel.

Storage:

- Store the device in a clean, dry place away from other materials.
- Keep out of reach of children.

Important:

- Do not clean the device with alcohol, as this can damage the surface and accelerate wear.
- The device is water-resistant (IPX7), but not waterproof. Avoid prolonged exposure to water.
- To recharge the vibrator, please only use the USB cable provided in the packaging.

Specifications

Material	Silicone + ABS
Size	0.7 * 2.4"
Waterproof	IPX7
Working Frequency	10 speeds
Working Time	About 50mins
Noise	<55db

Warnings: Do not use this product if you have an allergy to silicone or silicone-based products. If you experience any soreness, dryness, or redness, discontinue use immediately and consult a physician. If using a Lube only use qualitative water-based Lubes. Be aware of possible side effects if combined with stimulatory gels, lubricants, or other products. For safe and hygienic use, ensure the product is cleaned thoroughly after each use and rinsed with fresh water. Use of non-original manufacturer accessories may damage the product and cause explosion. Prolonged use is not recommended. When the vibrator gets warm, stop and cool the vibrator down before you use it again.

Find out more online at:
WWW.WETFORHER.COM

WFH DESIGN USA LLC
All Right Reserved - order@wetforher.com
Designed in Miami - Made in China

86 mm

116 mm

116 mm