

WET FOR HER®

RockHer™ SCISSORING VIBRATOR WITH REMOTE CONTROL

USER MANUAL




@WETFORHER



How To Power On

1. Before turning the toy on, make sure the charging cable is unplugged.
2. Press and hold the power button for 3 seconds until the LED light indicator illuminates. The toy is now turned on.
3. To switch between vibration modes, press the power button on the toy until you find the desired mode.
4. To turn off the toy, hold the power button for 3 seconds until the light indicator is off.

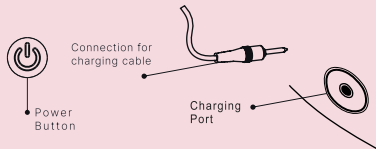

Care Instructions

1. Clean your toy with mild soap and warm water before and after each use. Wet For Her's Sex Toy Cleaner Spray is ideal for your toy's maintenance.
2. Make sure to rinse thoroughly with water to remove all soap residue.
3. Pat dry with lint-free cloth or a microfiber towel.
4. Store the device in a clean dry place.
Keep out of reach of children.

Charging

1. To charge your toy, plug in the USB cable to a power source such as a power block or computer USB port.
2. The LED light indicator will flash as the toy is charging and will remain steady when the battery is fully charged.

IMPORTANT

- Only use water-based lubes with silicone toys.
- Do not clean your toy with alcohol or alcohol-based cleaners, as this will damage the silicone surface and accelerate wear.
- This vibrator is water-resistant (IPX7), but not waterproof. Avoid fully submerging in water.
- Only use the included USB cable to charge the toy.

Warnings: Do not use this product if you have an allergy to silicone or silicone-based products. If you experience any soreness, dryness, or redness, discontinue use immediately and consult a physician. Use only qualitative water-based lubes. Be aware of possible side effects if combined with stimulatory gels, lubricants, or other products. For safe and hygienic use, ensure the product is cleaned thoroughly after each use and rinsed with fresh water. Use of non-original manufacturer accessoires may damage the product and cause explosion. Prolonged use is not recommended. If the vibrator gets warm, stop let the vibrator cool down before using it again.

Specifications

Material	Silicone + ABS
Size	2.75" * 1.26" / 70 mm * 32 mm
Water-resistant	IPX7
Working Frequency	10 speeds
Working Time	60 mins
Noise	< 45 db

Find out more online at:

[WETFORHER.COM](https://www.wetforher.com)

WFH DESIGN USA LLC

 
All Rights Reserved

order@wetforher.com

Designed in Miami - Made in China



How To Use The RockHer®

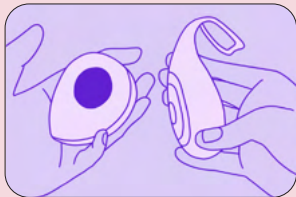

Always unplug your sex toys from the charging cable before turning the toy on.

Pair it with the ClickHer™ Remote Control


1. Turn on the sex toy before pairing it with the remote control.
2. Turn on the remote control by holding its power button for 5 seconds.
3. Switch between RockHer's vibration modes by pressing the remote control button repeatedly.
4. Turn off the remote control by holding its button for 5 seconds.
5. Turn off the toy by pressing and holding the toy's power button for 3 seconds.

The remote requires 1 x CR2032 battery (included with purchase). Use a coin to twist the cap off if battery needs replacement.

How To Use the RockHer® for Scissoring




1. Place the vibrating bulb inside your vagina and frame the U-ring around your clitoris.

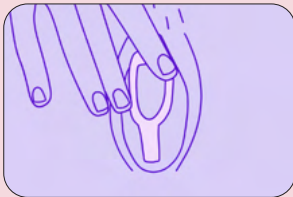

2. Adjust the U-ring around your clit and under your big lips.



3. Use the ClickHer remote control to change vibration speeds.

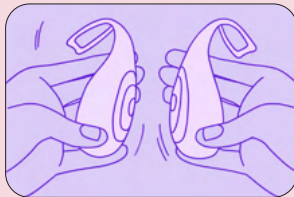

4. **TIP:** You can use two RockHers to double the sensations.



5. If you can't touch each other during scissoring, flip the toy around.



6. Insert the U-ring inside and use the vibrating bulb to make the connection.