

# PUCK VIBE INSTRUCTIONS

## REMOTE CONTROLLED, RECHARGEABLE 10 SPEED PUCK VIBE

### POWER

- Power On/Off Puck Vibe:** Press & hold black power button for 1 second
- Power On/Off Remote:** Press & hold power button for 3 seconds
- Change Speeds:** Once on, press remote +/- OR Vibe power button to switch speeds
- Stop:** Press and hold power button on remote or on vibe

### CLEANING & CARE:

Clean before use with soap & warm water. Clean & dry after each use. Do not clean while charging. Do not use a brush or acid based cleaner. Store away from direct sunlight.

**Material: ABS & Silicone**

**Puck Vibe: Waterproof**

**Remote Control: Not waterproof**

**Charging Cord: Not Waterproof**

**Charge & Usage time: 60 minutes**

WARNING : External use only.  
Not to be inserted into human body.  
Do not ingest. Keep away from children.

Made in China

